


Removal

- 1 Remove ornamental rod on edge (68–510).
- 2 Starting at rear press off sealing rail clips upward with a plastic wedge.
- 3 Remove sealing rail without bending it.

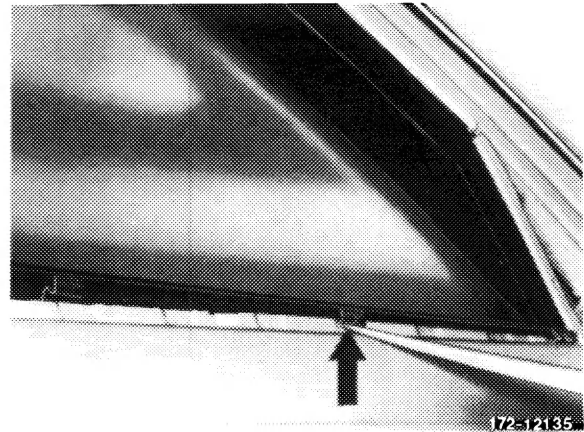

Installation

- 4 Install in reverse sequence.